



Version: 1.0 EN / Item no.: 00601-3-935

Conversion instructions - Calibration slide accessories kit for UDW 100&250

Please read carefully before initial operation!

Translation of
original conversion instructions

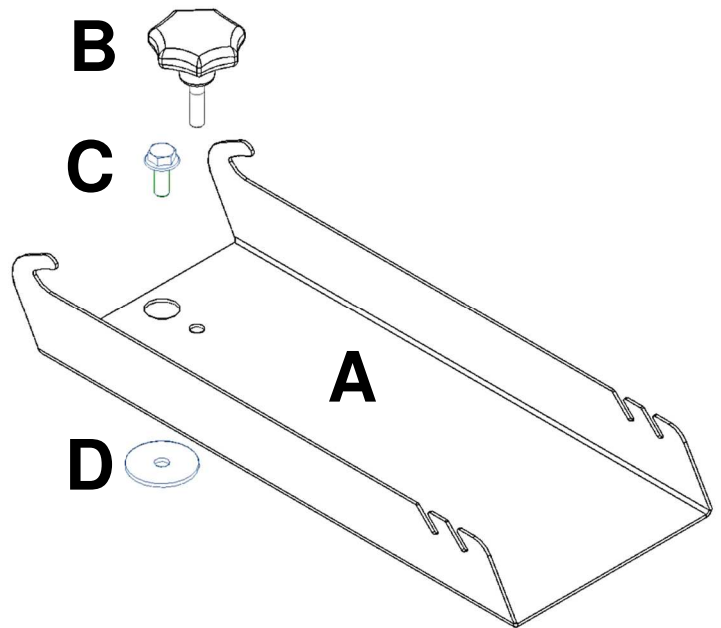


Table of contents

1	Items included	2
2	Installation on the UDW	2
3	Performing the calibration test.....	3

1 Items included

- 1x A- calibration slide
- 1x B- star knob screw
- 1x C- bolt M6x16
- 1x D- washer M6x30



2 Installation on the UDW

To install the calibration slide on the UDW, first attach the M6x16 bolt (C) together with the M6x30 washer (D) on the frame of the UDW.



PLEASE NOTE!

Make sure that the hexagonal bolt is firmly seated.

Then hook the calibration slide (A) onto the bolt and fasten it onto the frame with the star knob screw (B).



Figure 1: Installation of the calibration slide on the frame

Qualität für Profis

- seit 1997 -



**APV – Technische Produkte GmbH
HEADQUARTERS**

Dallein 15, 3753 Hötzelstdorf, Austria

Telephone: +43 (0) 2913 / 8001

Fax: +43 (0) 2913 / 8002

Email: office@apv.at

Web: www.apv.at

Company details

APV - Technische Produkte GmbH, Managing Director: Ing. Jürgen Schöls, Dallein 15, 3753 Hötzelstdorf, Austria, marketing@apv.at, www.apv.at, UID: ATU 5067 1107

Photo credits: Company photos © APV