

Version: 1.0 EN / Item no.: 00601-3-934

Conversion instructions - Shovel bracket accessories kit for UDW 100&250

Please read carefully before initial operation!


www.apv.at ®

Table of contents

1	Liefe	rumfang	2
2	Montage		3
		Untere Schaufelhalterung	
		Obere Schaufelhalterung	

1 Items included

- 1x **A** plate profile 1 shovel bracket
- 1x **B** plate profile 2 shovel bracket with 2 insert threaded bolts
- 2x C- washer M6x30
- 2x **D** flange nut M6
- 4x **E** grommet
- 2x **F** star knob screw

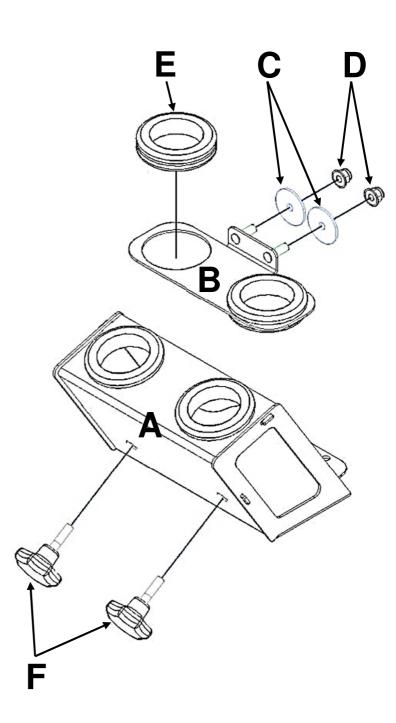

2 Assembly

2.1 Lower shovel bracket

First remove the M6 nuts on the frame near the metering unit. Put them aside.

Then put the plate profile 1 shovel bracket (A) on the insert threaded bolts and fasten the bracket with the previously removed nuts.

The two star knob screws (**F**) can then be screwed in. They are used during operation to fasten the tools.

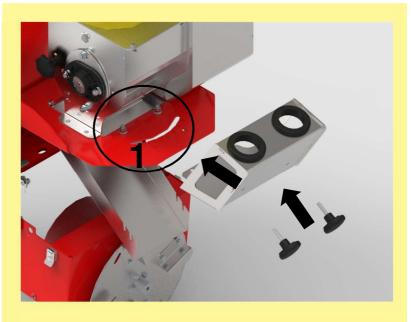


Figure 1: Installation of the lower shovel bracket

2.2 Upper shovel bracket

For the upper shovel bracket, drill 2 holes (\emptyset 6mm) in the hopper. Then insert the plate profile 2 shovel bracket with the insert threaded screw (\mathbf{B}) through the drilled holes and fasten it with 2 washers (\mathbf{C}) and 2 flange nuts (\mathbf{D}) from the inside of the hopper.



Figure 2: Installation of the upper shovel bracket

0

CAUTION!

After installation, a silicon joint must be applied along the plate profile to prevent any water penetration.



APV - Technische Produkte GmbH **HEADQUARTERS**

Dallein 15, 3753 Hötzelsdorf, Austria Telephone: +43 (0) 2913 / 8001 Fax: +43 (0) 2913 / 8002

Email: office@apv.at Web: www.apv.at

Company details

APV - Technische Produkte GmbH, Managing Director: Ing. Jürgen Schöls, Dallein 15, 3753 Hötzelsdorf, Austria, marketing@apv.at, www.apv.at, UID: ATU 5067 1107

Company photos © APV Photo credits: